32

 
サーボの動作確認 Servo movement check

作業に入る前に送信機用のパッテリーの充電を 行ってください。

Before starting, recharge the transmitter battery.

回転方向が逆の場合は、送信機のリバースス イッチを切り替えて、指定の通り動くように セットしてください。

If the rotational direction is reversed, change the transmitter's reverse switch and set it to move as indicated.



The wiring of the servo, gyro, and power source to the receiver varies depending on their respective makers as well as the way they are assembled. Install the wiring according to each instruction manual.

